

TF243 SERIES FAN COIL UNIT CONTROL

- Memorized time off
- Random startup
- Remote temperature sensor optional
- Energy saving mode optional
- LCD display with simple user interface
- Room temperature or setpoint temperature display selectable
- Manual or automatic fan speed selectable
- Temperature units in either °C or °F
- User setting can be stored when power loss
- Freeze protection function available
- Keypad lock options
- Heating and cooling setpoint limitation

General

The TF243 series digital thermostat is designed for 3-speed fan and modulating valve control in a fan coil system, including:

- 2-pipe cooling only/heating only/manual changeover
- Ventilation mode
- Manual or automatic 3-speed fan control
- Water valve control

Besides the basic controls, TF243 series provide **Random Start-up Function** to maintain power grid stability. In addition, Honeywell **Memorized Time Off Function** can automatically turn off the thermostat to save energy.



Technical Specification

Power supply	24(±10%)VAC, 50/60Hz
Manual Cycle times	10,000 times
Accuracy	±1°C at 21°C
Auto Cycle times	100,000 times
Modulating Output	DC 0~10V
Set point range	10 ~ 32°C
Ambient operating limits	0~ +49°C
Protection class	IP20
Accuracy	±1°C at 21°
Auto Cycle times	100,000 times
Ambient storage limits	30 ~ +60°C
Humidity limits	5~90% RH, non-condensing
Action Type:	1
Pollution Degree	2
Remote temperature sensor	NTC20K

Honeywell

Display range	0 ~ 37°C
Electronic control software class	Class II
Protection against electric shock class	Class A
Rated Impulse Voltage:	2500V
Maximum Temperature	155°C
2A	When the load of the thermostat is inductance For valve control signal: 0-10V 16mA Max


Rating Capacity	Applied altitude up to 2000m above sea level
4(2)A	Working current for the whole product : For Fan current
4A	When the load of the thermostat is resistance
Wire sectional area (Recommendation)	1.0-1.5mm ²

Model summary

Model Number	Backlight	Application	Color	Package	Ventilation Mode	Auto Fan	Power
TF243WN/U	Yes	2 pipes	White	Unit Package	Y	Yes	24VAC; 50/60Hz
TF243DN/U	Yes	2 pipes	Black	Unit Package	Y	Yes	24VAC; 50/60Hz

Product Design

Thermostat appearance

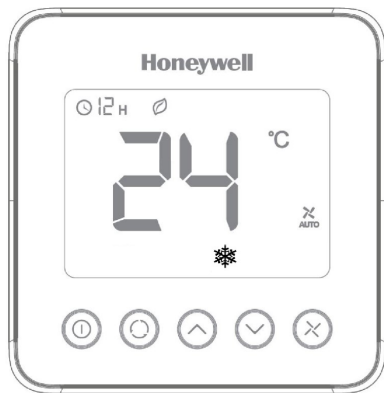

Function


Valve Control

Thermostat measures the room temperature via integrated sensor or remote temperature sensor and maintains the setpoint by delivering modulating valve control command outputs.

The fan setting can be selected as manual or automatic 3-speed operation. When in "manual" mode, the fan is switched to the selected speed via control output F3 (high), F2 (Medium) , F1 (Low).

While in "automatic" mode, fan speed depends on the modulating duty cycle. When the modulating duty cycle reaches 0%, the valve will be closed and the fan will be closed in the meanwhile.


LCD Display

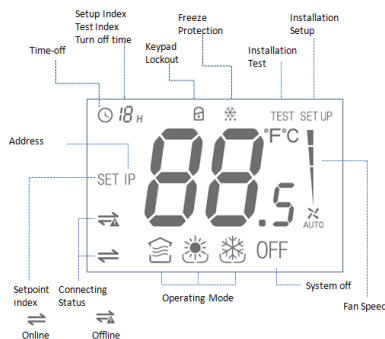

Memorized Time Off

The time off feature will automatically turn off the thermostat after a selectable amount of time. To change the time setting, press and hold the power button for more than 3 seconds and press “up” and “down” button to change the value when the thermostat is working.

NOTE: The setting range is from 0 to 12 hours. The step is 1 hour and the default value is 0.

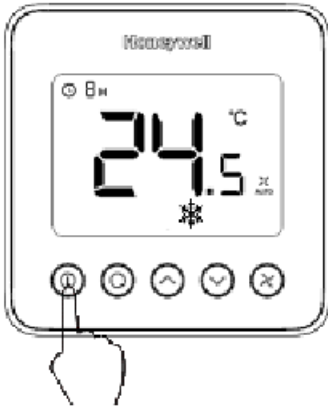

Backlight

To turn on the backlight, press any key. The backlight will timeout 8 seconds after the last key is pressed. When in ISU and Installation test mode, the backlight will timeout 60 seconds after the last key is pressed.

Keypad Lockout

Keypad lockout can be set in ISU and the default status is “All keys are available”. Keypad lock can be optioned to “system button locked out”, “Fan and system buttons locked out”, “all buttons (except power button) locked out” and “all buttons are-locked”.

Temperature Display

The displayed temperature can be set to room temperature or setpoint. The setting can be changed during ISU (Installation Set Up) process.

Operating Mode


Comfort Mode

In comfort mode, the setpoint and fan speed can be changed by pressing corresponding buttons. Comfort mode including 2-pipe cooling only/heating only/manual changeover.

Comfort Mode


A dry contact (such as hotel card) or button press (press and hold the “mode” button for more than 3 seconds) can activate the energy saving mode. The dry contact can be selected as normal open or normal close in ISU.

If activated by dry contact, all buttons will be locked except the multi-key for ISU. If activated by button press, any button press can stop energy saving mode. The setpoint will change to the remote setback heating/cooling setpoint when the energy saving mode is enabled. The heating setpoint range is 10°C to 21°C and the default is 18°C. The cooling setpoint range is 22°C to 32°C and the default is 26°C.

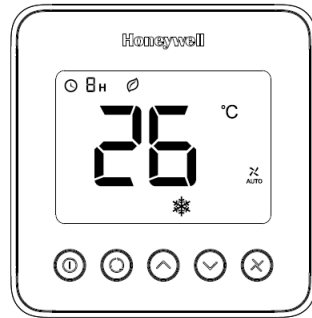


Ventilation Mode

Press “mode” button to enter “ventilation” mode. In “ventilation” mode, no output for valve while the fan will operate at selected fan speed.

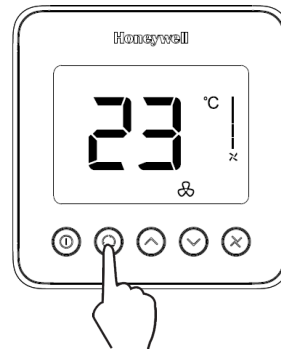

Freeze Protection Mode


Freeze protection can be selected as disabled or enabled (default) in the ISU. In freeze protection mode (only in heating applications), when thermostat is off and the temperature is below 6°C, the thermostat will activate heating mode until the temperature rises to 8°C.

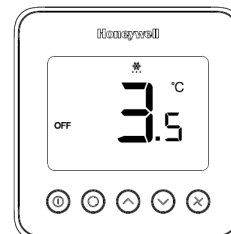


Installation and Wiring

 F243 Series can be installed in standard 86 size junction box directly.

The screws must be locked tightly to avoid wire break off from the terminals.
The wire should not be tangled and stucked between front case assembly and back case

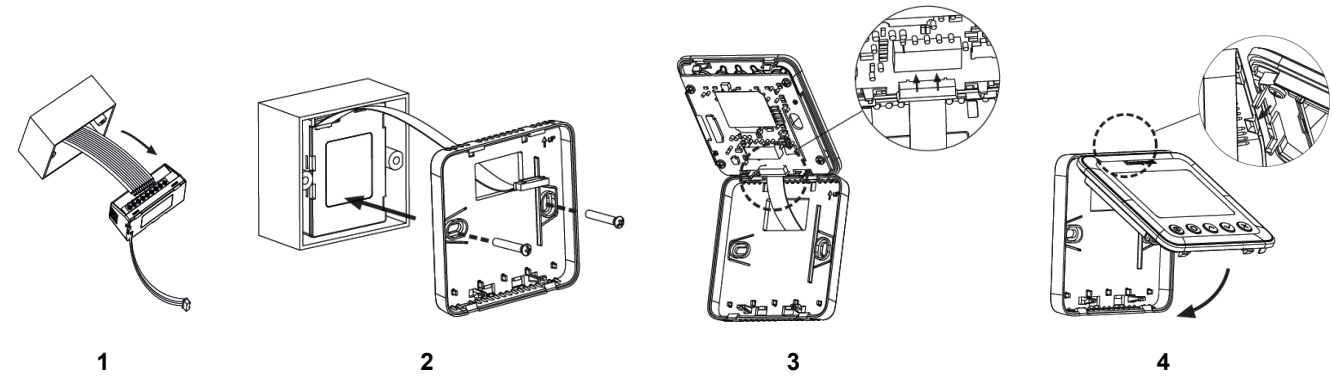

Wiring

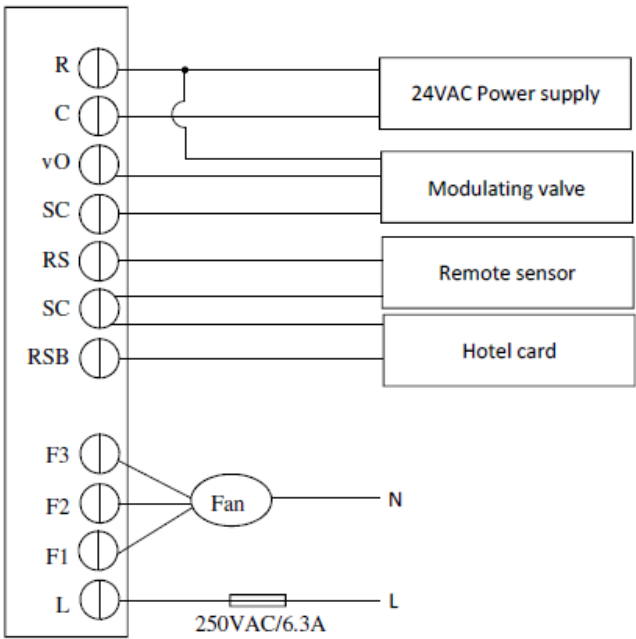

Terminal Designations

Terminal	Description
R	220/230Vac Neutral
C	220/230Vac Line
vO	Heating / Cooling valve open
SC	Heating / Cooling valve close
RS	High speed fan
SC	Medium speed fan
F3	Low speed fan
F2	RS 485+
F1	Low speed fan output
L	230Vac line voltage for fan input

Fig. 2. Honeywell VC7931 Wiring

Note: The 24Vac power supply should meet Class 2
SELV and less than 100VA
A Fuse or breaker is necessary before L terminal (Fuse
range is 5.0 A to 6.3A)

ISU (Installation Setup)

Press and hold the “mode” and “up” buttons together for more than 3 seconds to enter or exit ISU. Change the ISU code by pressing the “mode” button and then change the option setting by pressing the “up” and “down” button refer to the following introduction.

ISU Code	Description	Options
1	System Type	0 Heating only
		1 Cooling only
		2 Two pipes heating/cooling manual (Default)
2	Remote Sensor	0 Onboard sensor (Default)
		1 Remote sensor (NTC20K)
3	Temp. Scale	0 °F
		1 °C (Default)
4	CPH value (cool)	0 Auto only
		1 Manual only (3 speed: Low→Med→High→Low)
		2 Users can choose auto or manual (Default)
8	Display Temp. adjustment	-2~2°C, 0.5°C. Default 0°C (-4~4°F, 1°F. Default 0°F)
9	Temp. Display	0 room temp. (Default)
		1 set point

ISU Code	Description	Options
10	Heating Range Stops	10~32°C. Default 32°C (50~90°F. Default 90°F)
11	Cooling Range stops	10~32°C Default 10°C (50~90°F. Default 50°F)
12	Keypad lockout	0 All keys are available (Default)
		1 System button locked out
		2 Fan and system button locked out
		3 All buttons locked out except power button
13	Remote Setback enable method	4 All buttons are locked
		0 Hotel card NO
		1 Hotel card NC 2
14	Remote Setback Heating Setpoint	Button (Default)
		10~21°C. Default 18°C (50~70°F. Default 64°F)
15	Remote Setback Cooling Setpoint	22~32°C. Default 26°C (72~90°F. Default 79°F)
16	Freeze Protection	0 Disabled
		1 Enabled (Default)
17	Power Recovery status	0 OFF
		1 Previous status (Default)
19	Fan mode in ES Mode	0 Run as Auto when ISU_4=2 (Default)
		1 Run as low when ISU_4=2

For more information,
<https://honeywellbuildings.in>
 Call: 1-800-103-0339
 Email: HBT-Indiabuildings@honeywell.com

Honeywell HBT India Buildings
 Unitech Trade Center, 5th Floor, Sector-43,
 Block C, Sushant Lok Phase - I,
 Gurgaon - 122 002